

IPERCERAMICA

SHOWER ENCLOSURE-OXO INXO

IPERCERAMICA SPA
Via Pedemontana 13
41042 Fiorano Modenese (MO) - ITALY
www.iperceramica.it

1

We appreciate your choosing of our shower products, and wish you a pleasant experience with our products and service. Please read Instruction carefully before installation.

IMPORTANT

Please check the shower enclosure for transport damage and completeness before installation. Complaints made following installation cannot be accepted.

Please read carefully the following instructions before installing your shower enclosure to ensure safe and proper use and avoid any injury to either the installer or user .Failure to comply may invalidate your guarantee.





CARE INSTRUCTIONS

Shower enclosures should be cleaned after every use.To prevent limescale from building up, use a squeegee,a soft cloth or chamois leather-but no cleaning-to wipe off any water droplets left after showering.Residue left by bodycare products (liquid soap,shampoo, shower gel) can also cause substances to accumulate.Use water to rinse away residues after use.All sliding door track fittings should also be cleaned this way-to ensure that they continue run smoothly.

- **Don't allow limescale to build up-especially in hard water areas**
- **If you do get a stubborn limescale build up,a mixture of 50:50 vinegar and water will help you to clean it away-but make sure all vinegar is rinsed off completely**
- **Never use strong detergents or cleaning agents**
- **Cleaning materials should wherever possible be rated between PH4 and PH8**
- **In no circumstances should you use any abrasive substance**



2

Tools Required(not supplied)

Magnetic Crosshead Screwdriver		Silicone Sealant	
Rubber Mallet		Knife	
Spirit Level		Pencil	
Tape Measure		6mm Drill Bit (suitable for wall type)	Ø6 
Power Drill (with hammer action)		8mm Drill Bit (suitable for wall type)	Ø8 

3

Shower screen fittings


Ref	Illustration	Description	Qty
S02			2
S03			2
S04			2
S05		Top Roller	2
S06		Stopper	2
S07		Bottom glass guide	1
S08		Corner connector	1pair
S09		Bottom connector	1pair
S10		2.5mm allen key	1
S11		3.0mm allen key	1
S12		4.0mm allen key	1
S13		Screws ST4x35	3
S14		Screws ST5x35	2
S15		Ø6 Wall plug	3
S16		Ø8 Wall plug	2
S17		Positioning card board	1
S18		Handle	1
S19			1
S20		Wall profile	1
S21		Fixed glass	1
S22		Door side tape	1
S23		Door side tape	1
S24		Door	1

4

Shower screen fittings





Ref	Illustration	Description	Qty
S25		Magnetic door seal	1
S26		Bottom seal	1
S27		Bottom profile	1

5










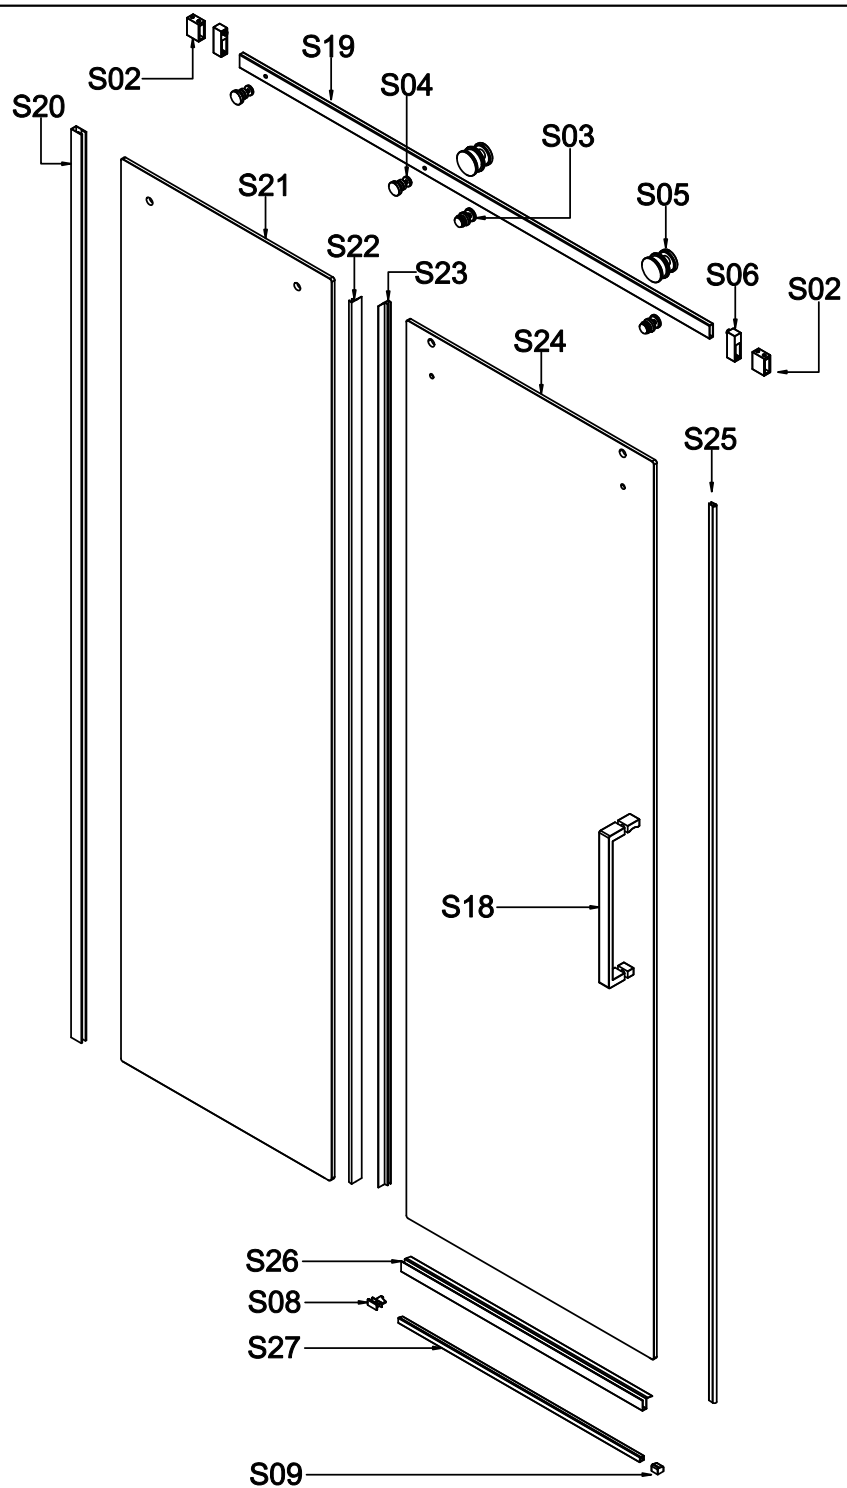


6

Parts list
(Include):

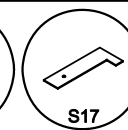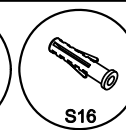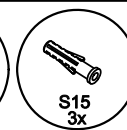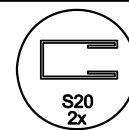


Tools required
for product
installation:

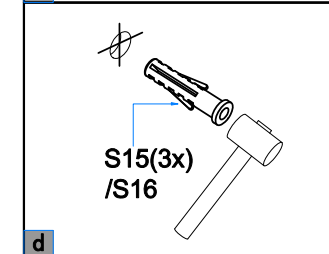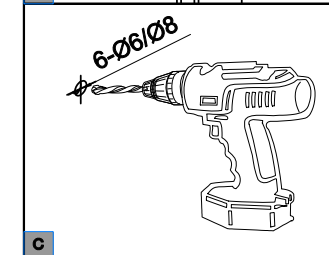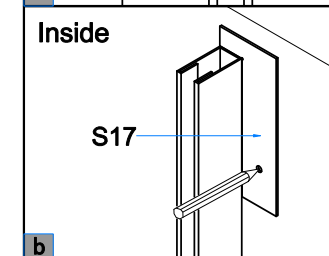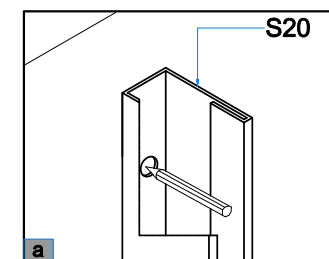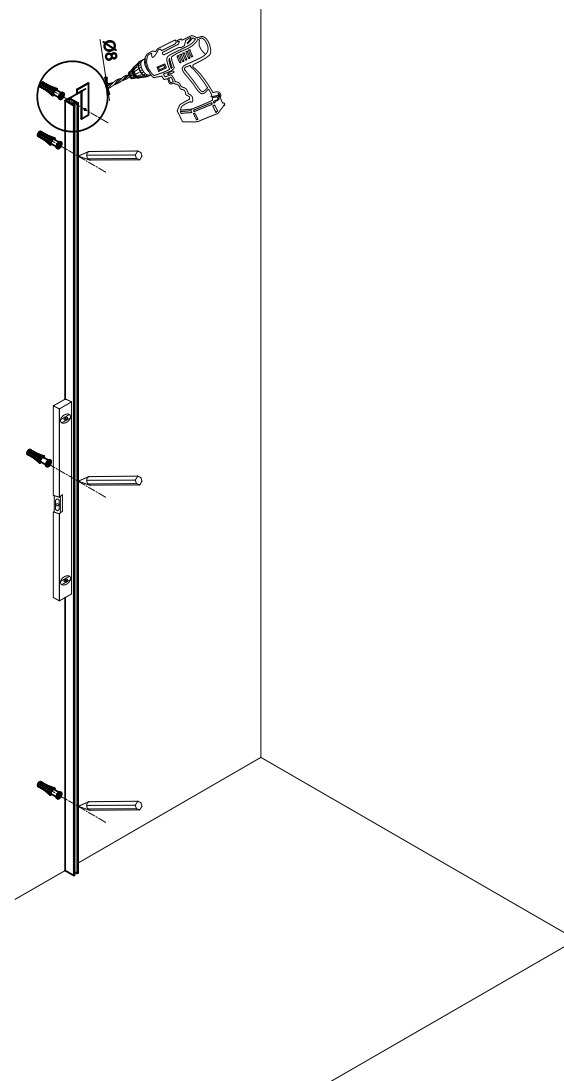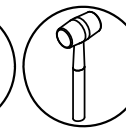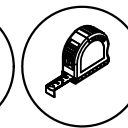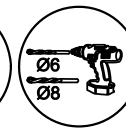
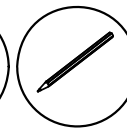
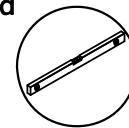


7

Parts list
(Include):

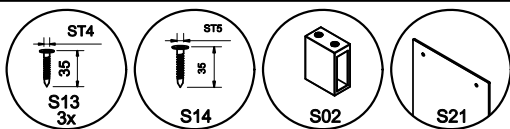


Tools required
for product
installation:

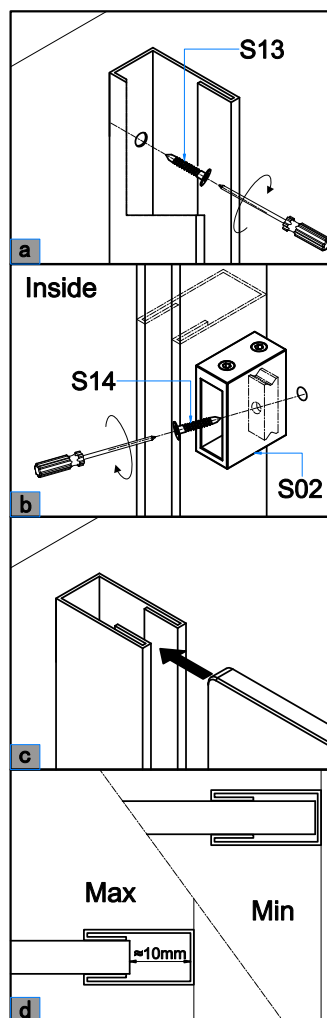
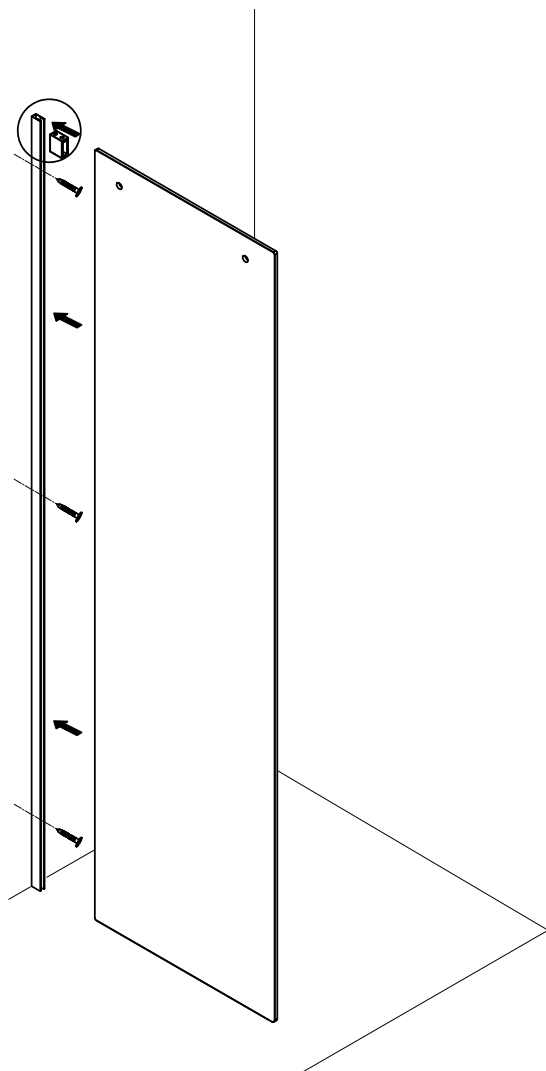
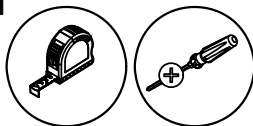


8




Parts list
(Include):

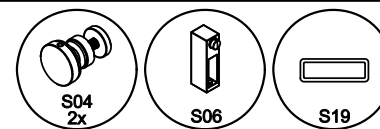



Tools required
for product
installation:

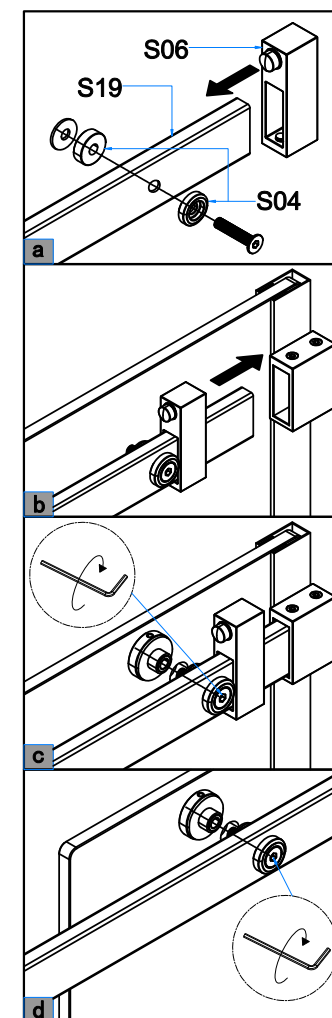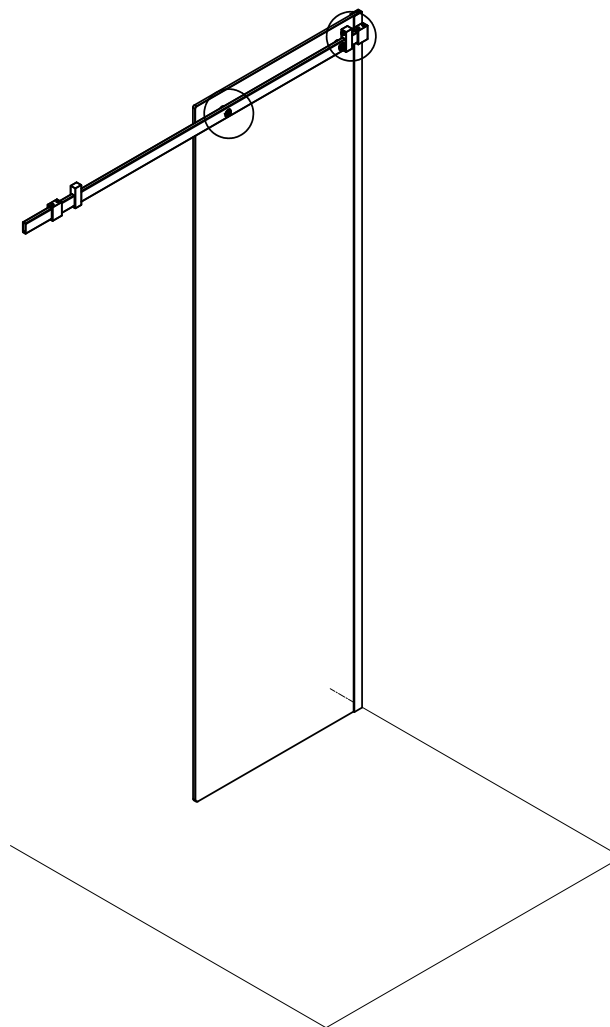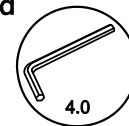

9

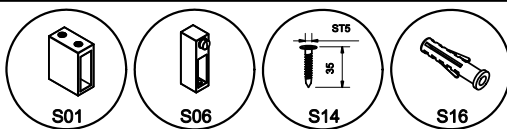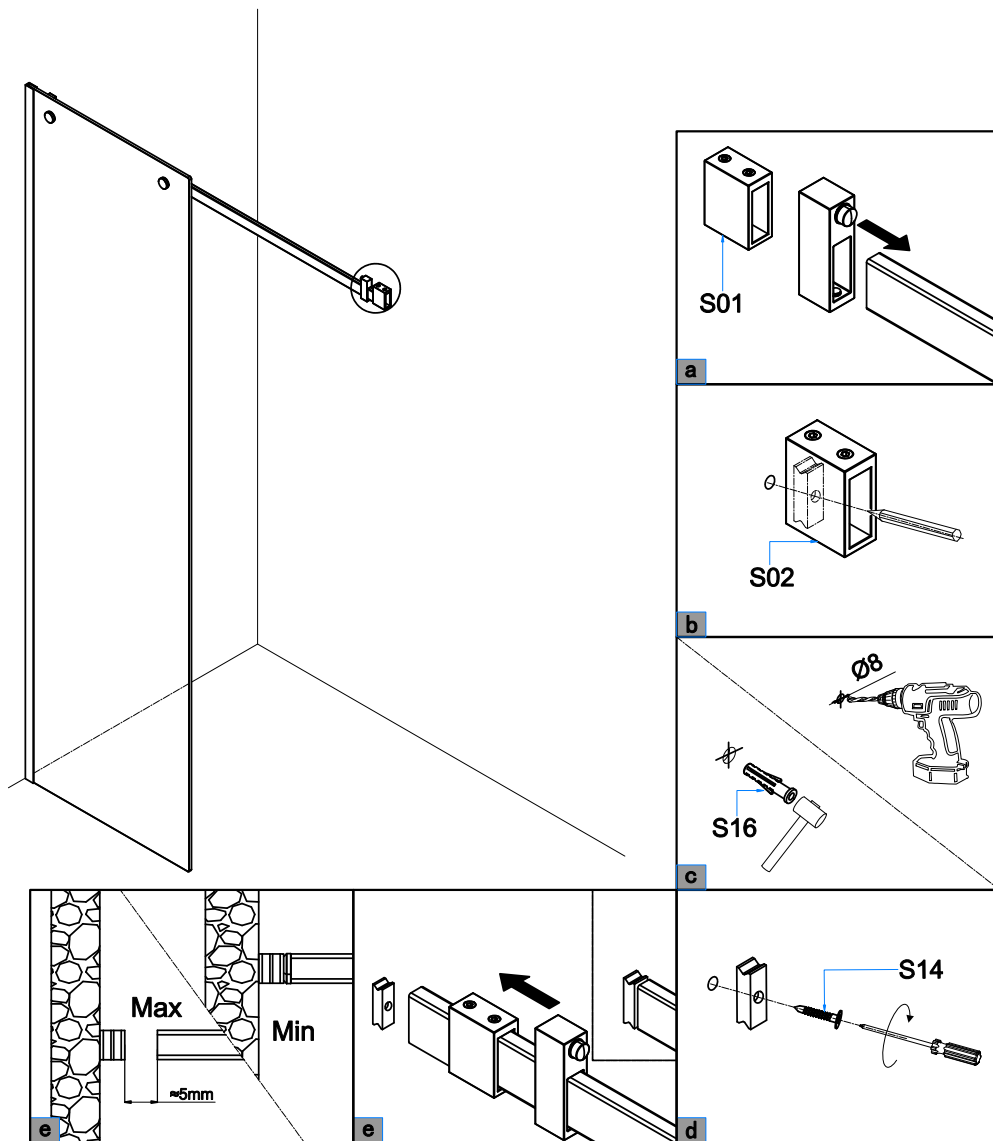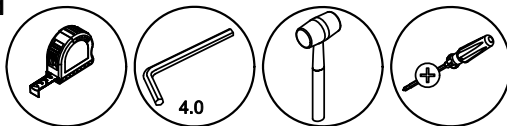
Parts list
(Include):Tools required
for product
installation:

10

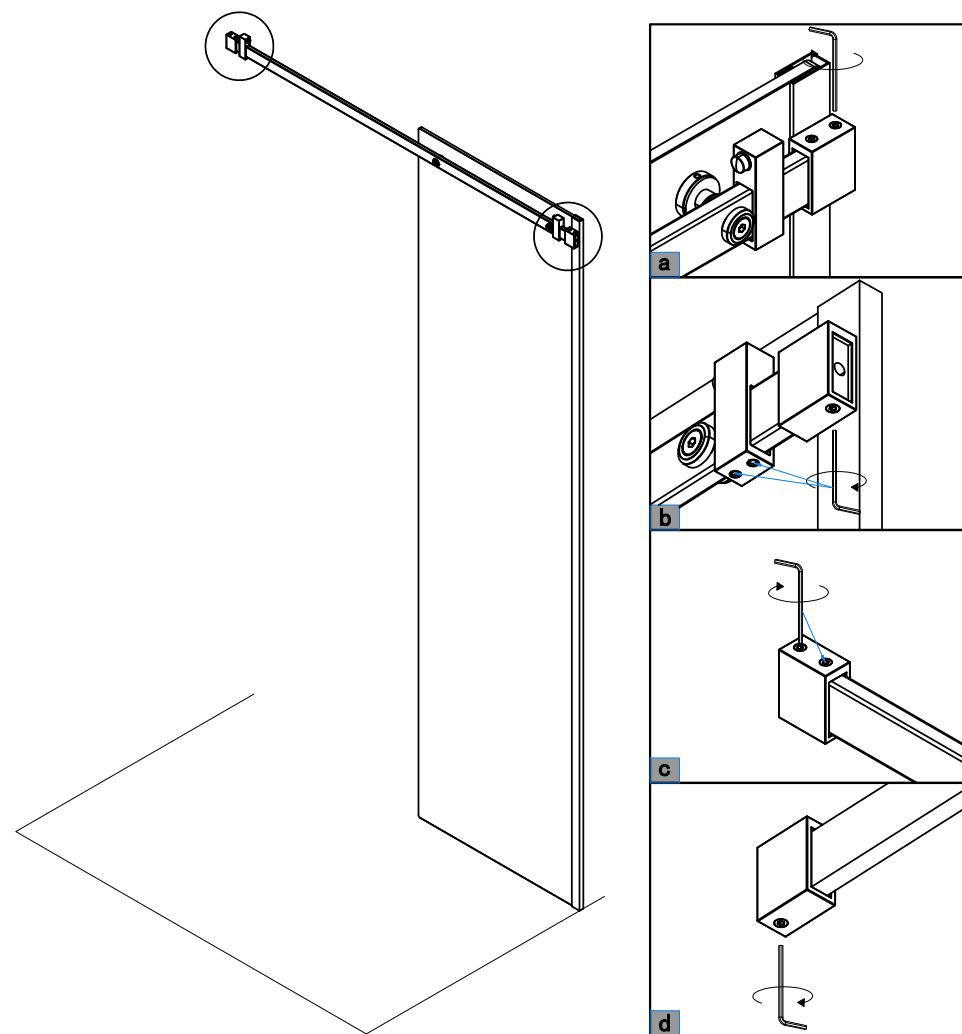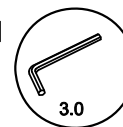
Tools required
for product
installation:

11

Parts list
(Include):

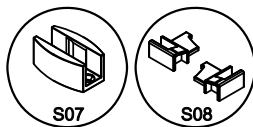


Tools required
for product
installation:

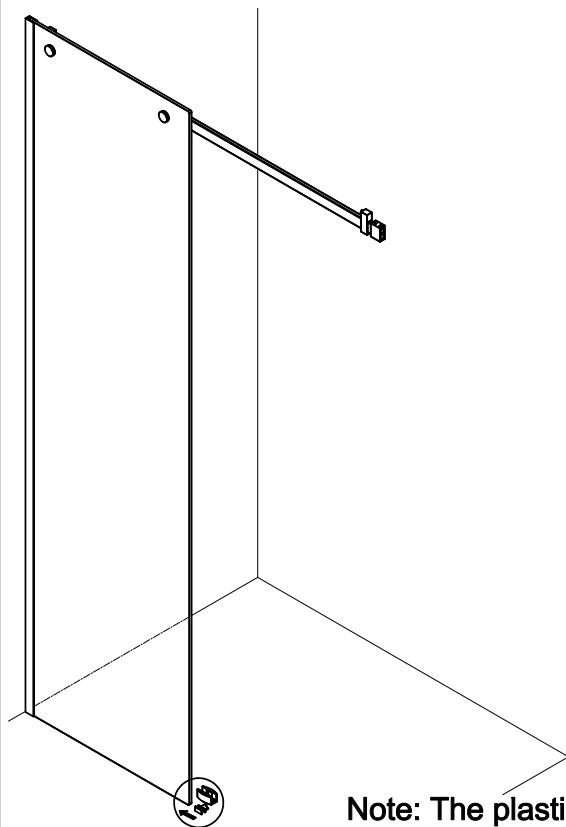


Note: The plastic part of the glass guide should be placed as shown in the diagram.

Note: The raised part of the bottom waterproof connector as indicated by the arrow can be snapped off.



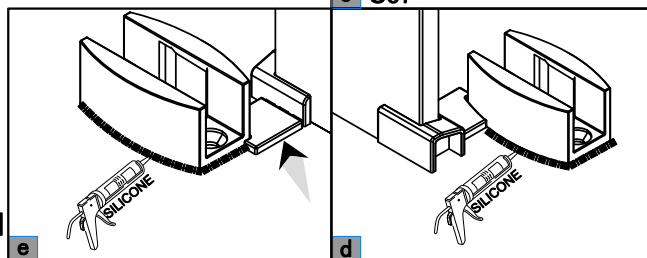


12




Parts list
(Include):

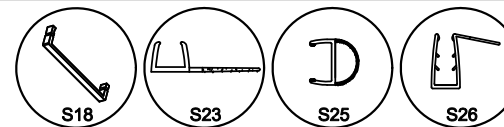


Tools required
for product
installation:

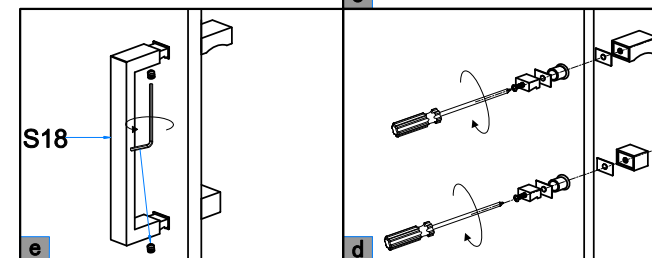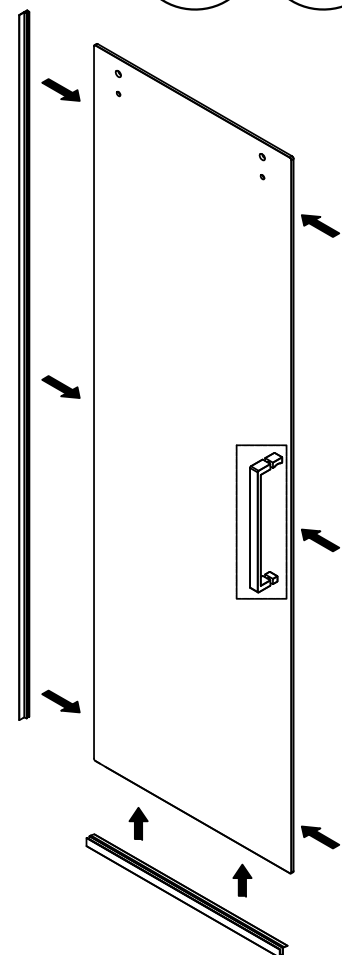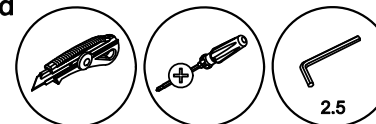

13

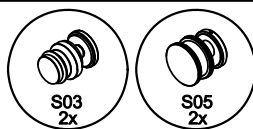
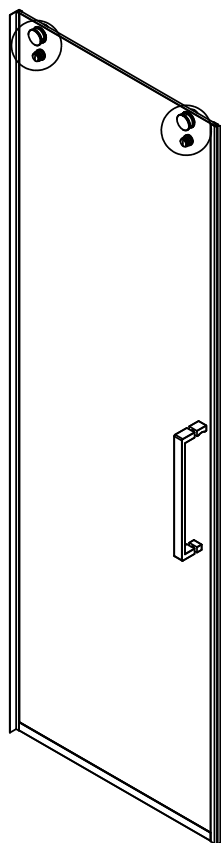
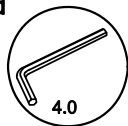
Parts list
(Include):Tools required
for product
installation:

Note: in this step, pls
adjust the roller to
highest position.

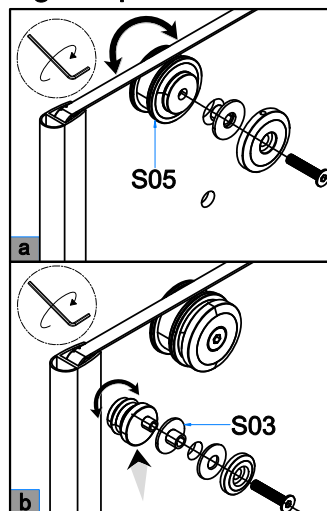


Note: in this step, pls
adjust the eccentric screw
to the lowest position.

14

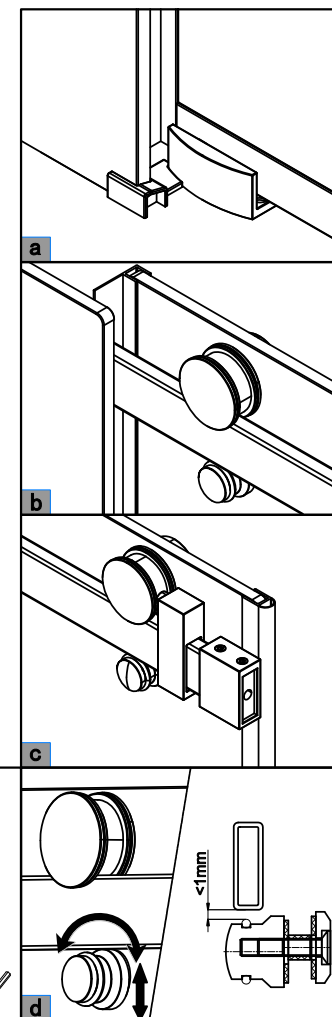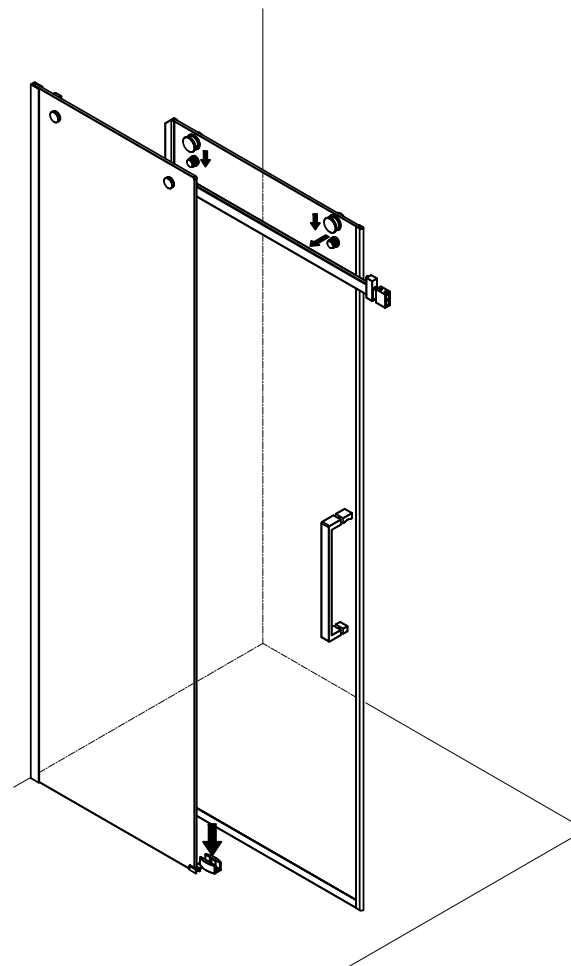
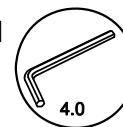
Tools required
for product
installation:

15

Parts list
(Include):

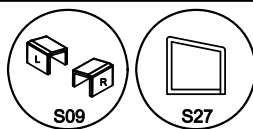

Tools required
for product
installation:



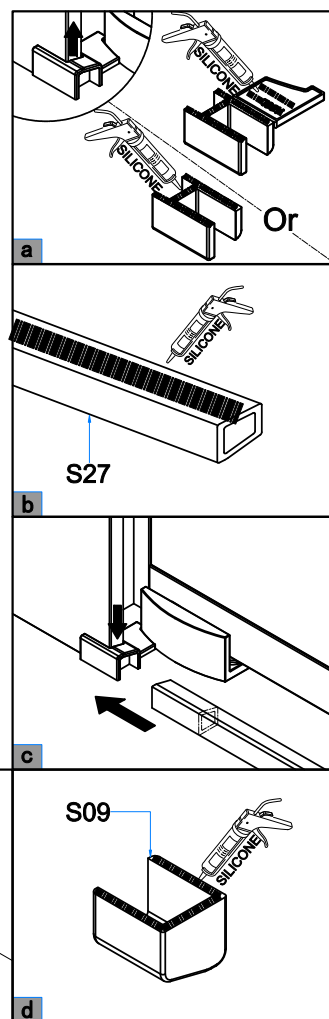
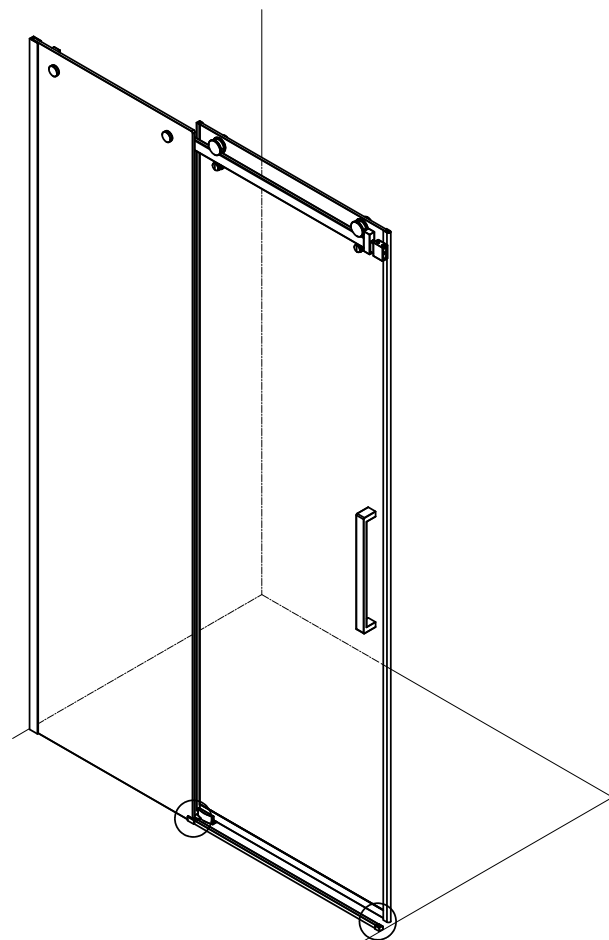


16

Parts list
(Include):





Tools required
for product
installation:

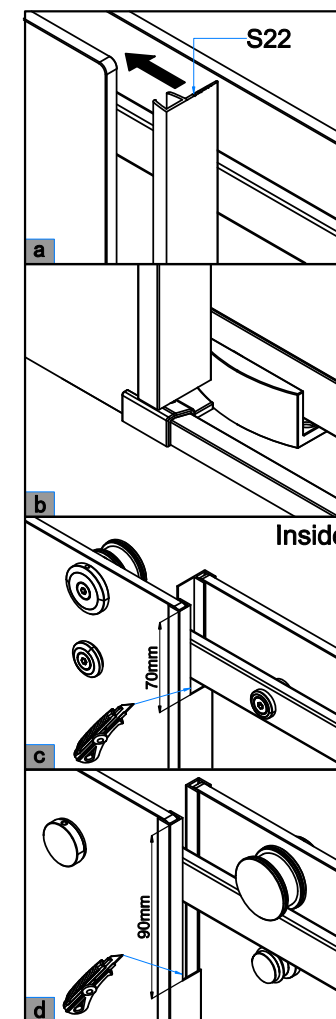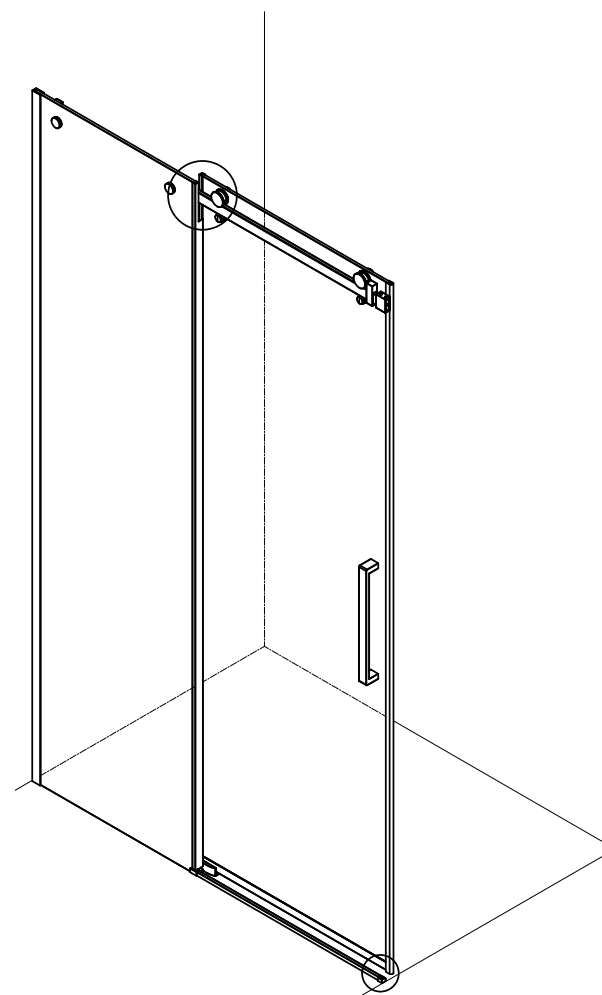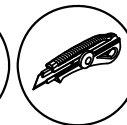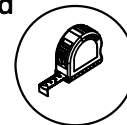



17

Tools required
for product
installation:

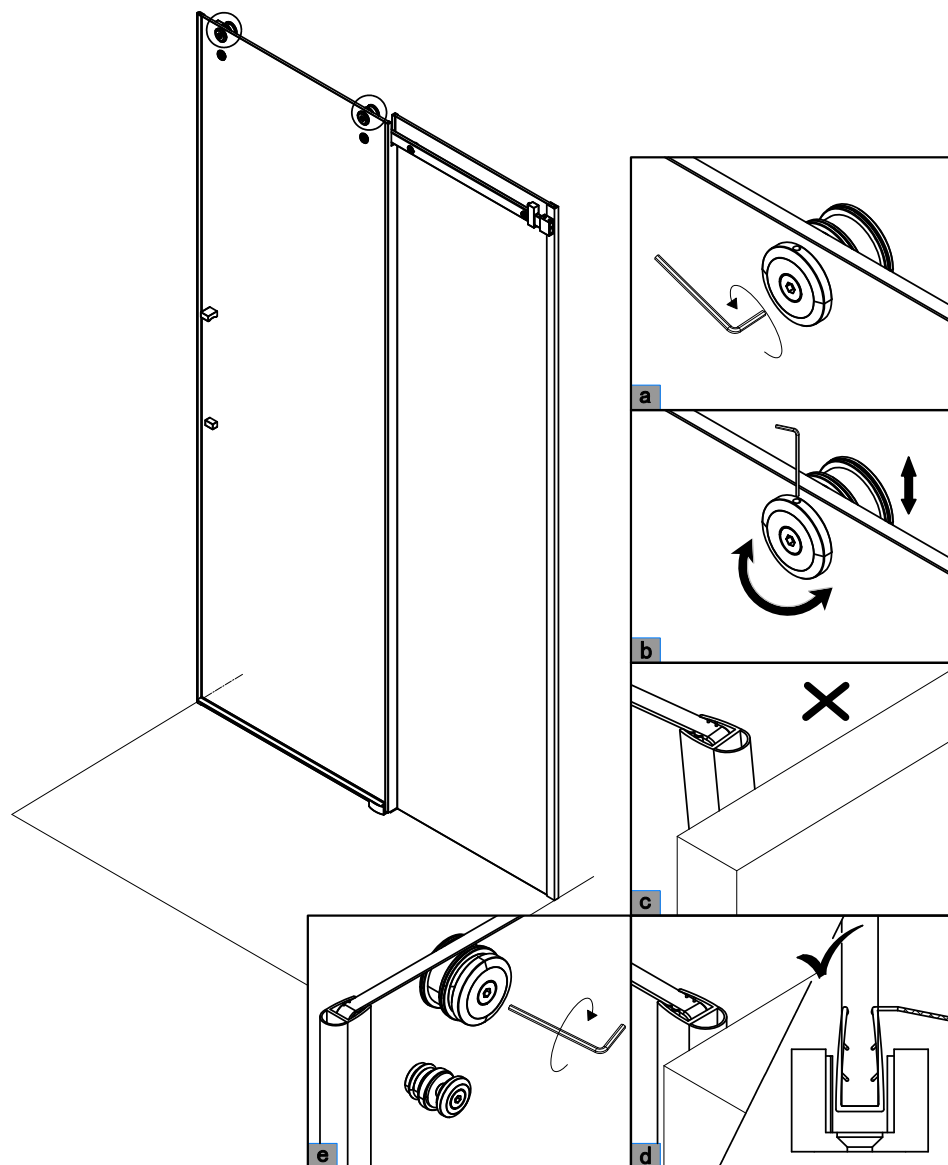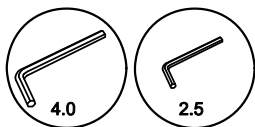

18

Tools required
for product
installation:

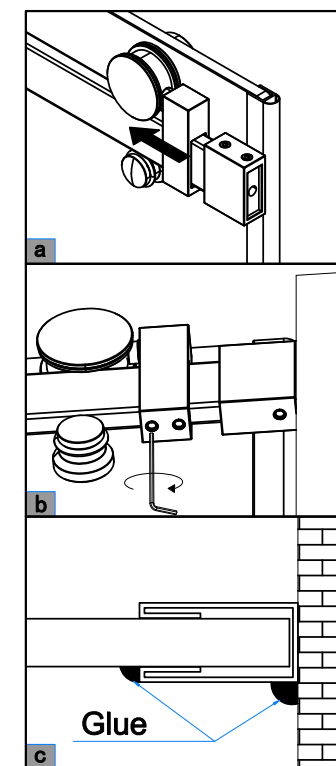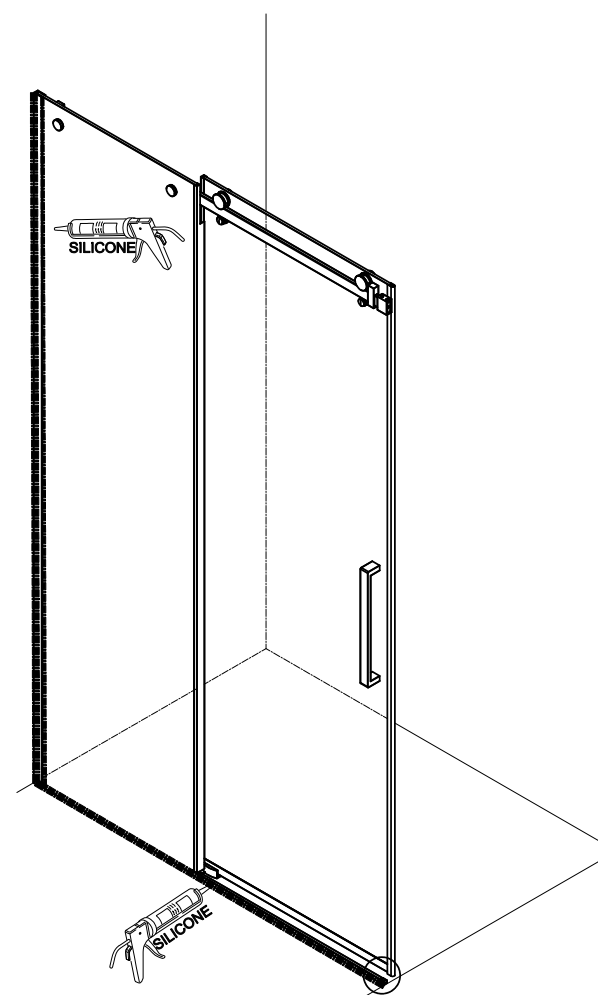


19

Shower screen fittings


Ref	Illustration	Description	Qty
S01			1
S02			1
S03			2
S04			2
S05		Top Roller	2
S06		Stopper	2
S07		Bottom glass guide	1
S08		Corner connector	1pair
S09		Bottom connector	1pair
S10		2.5mm allen key	1
S11		3.0mm allen key	1
S12		4.0mm allen key	1
S13		Screws ST4x35	6
S14		Screws ST5x35	1
S15		Ø6 Wall plug	6
S16		Ø8 Wall plug	1
S17		Positioning card board	1
S18		Handle	1
S19			1
S20		Wall profile	2
S21		Fixed glass	1
S22		Door side tape	1
S23		Door side tape	1

20

Shower screen fittings


Ref	Illustration	Description	Qty
S24		Door	1
S25		Magnetic door seal	1
S26		Bottom seal	1
S27		Bottom profile	1
S28		Side panel	1

21


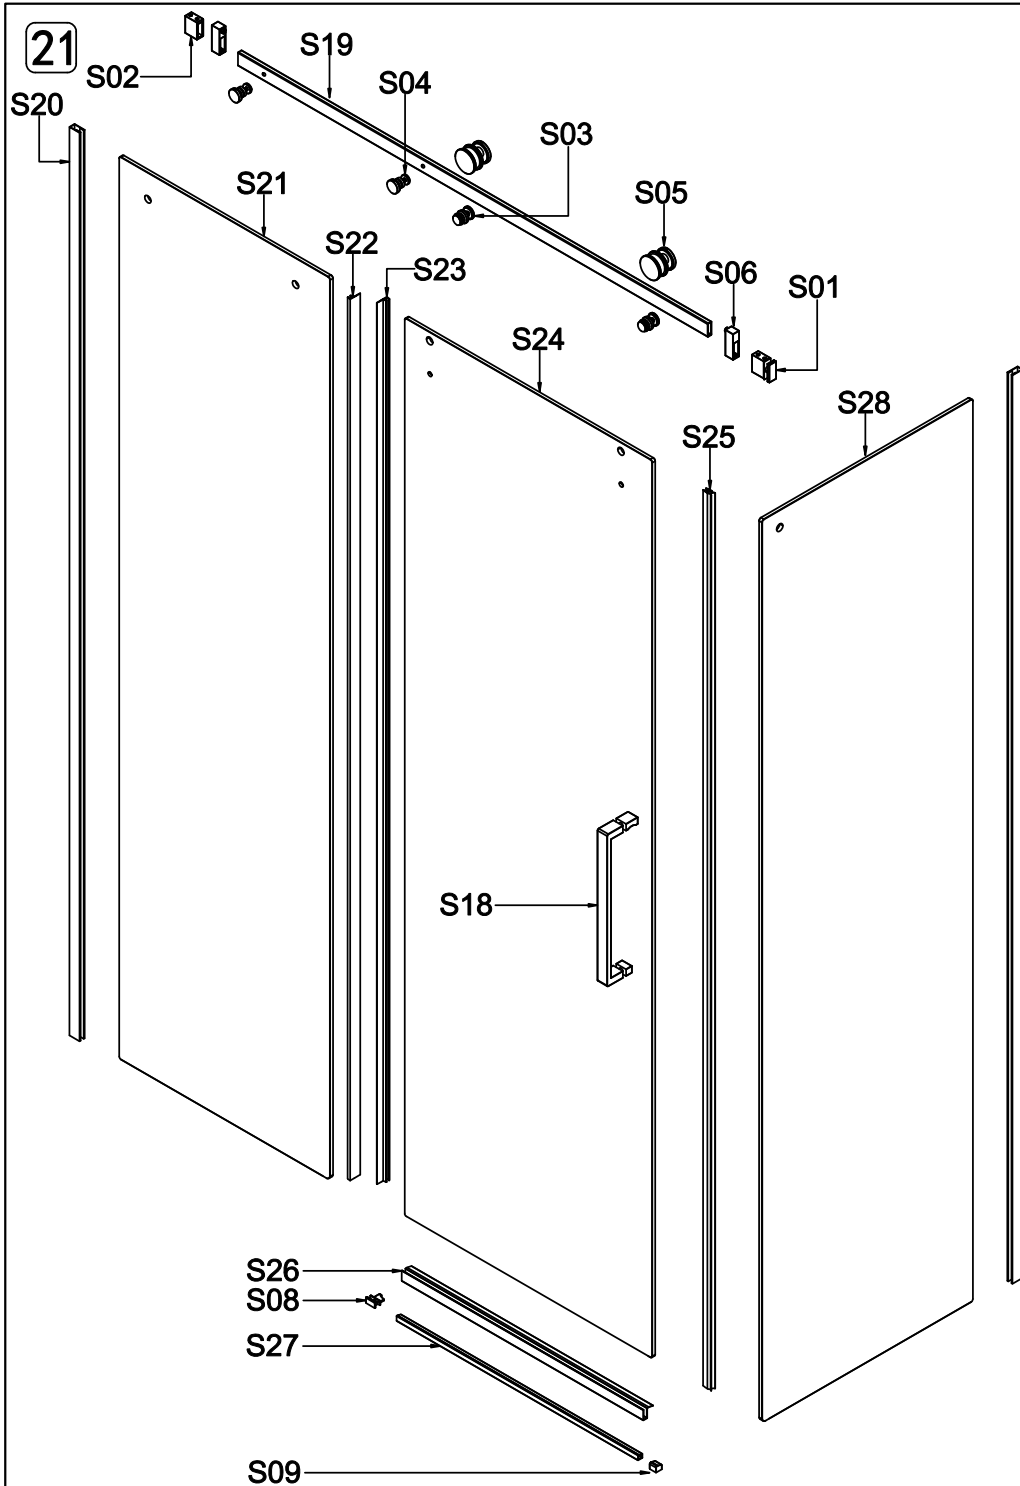


22





Parts list
(Include):

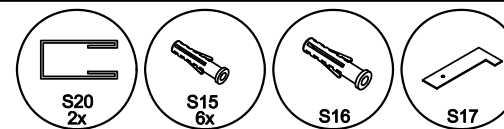





Tools required
for product
installation:

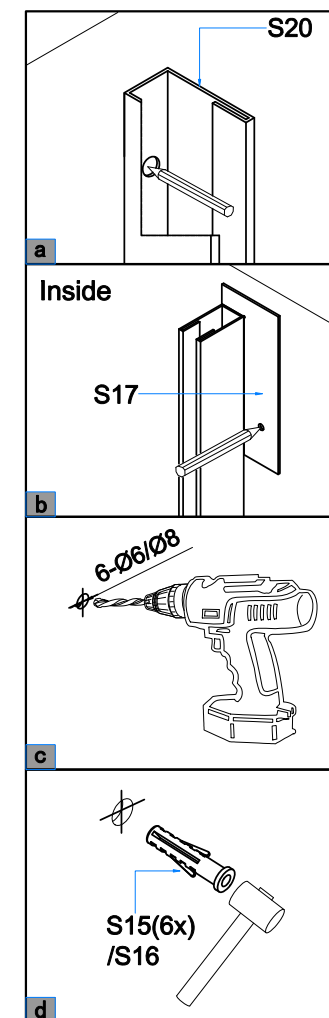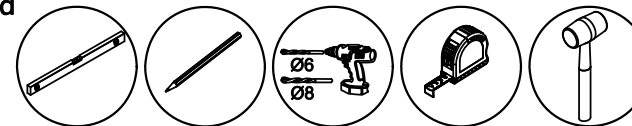

23

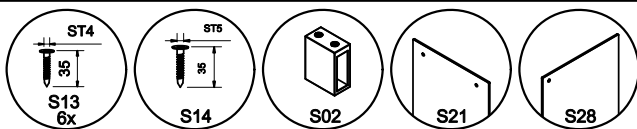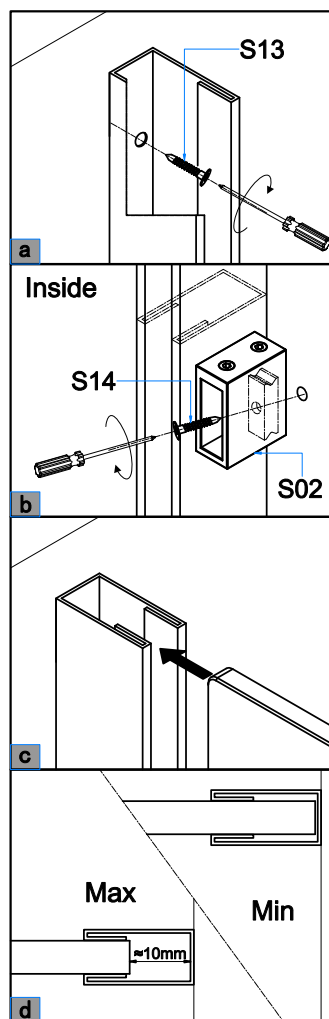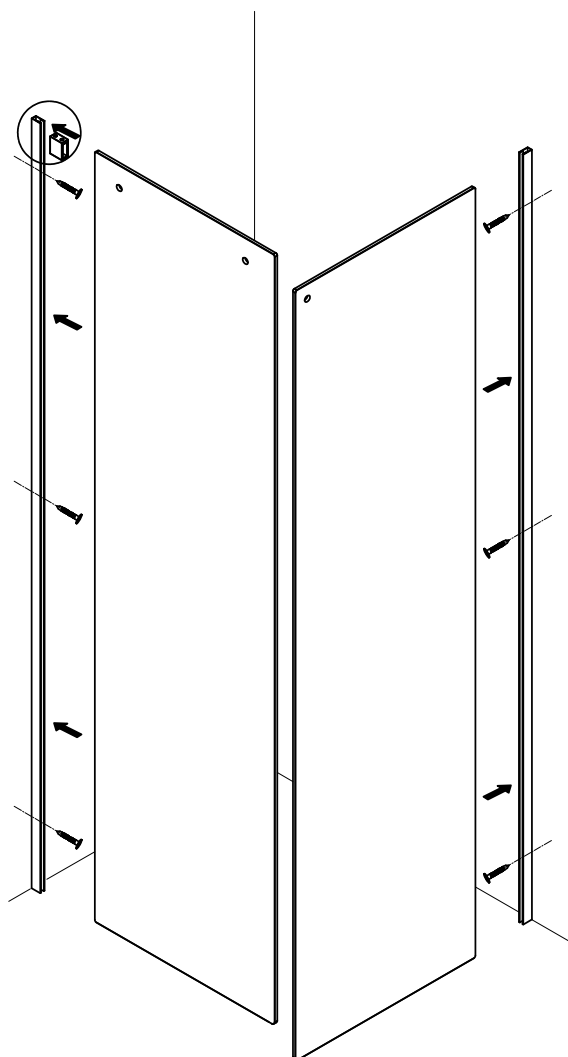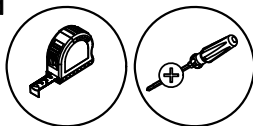
Parts list
(Include):Tools required
for product
installation:

24

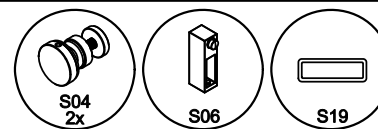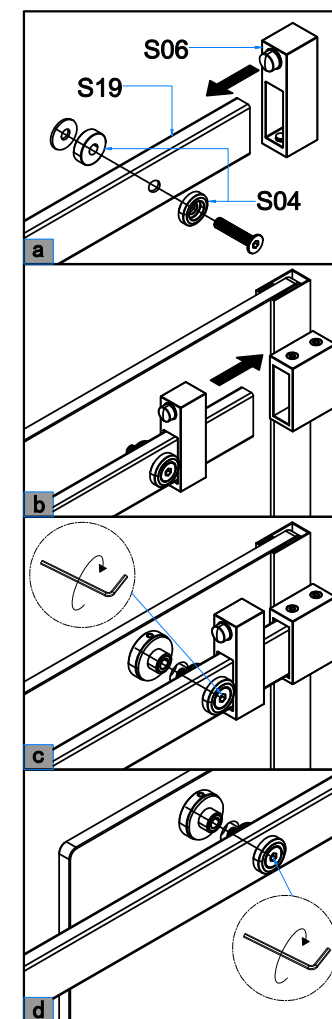
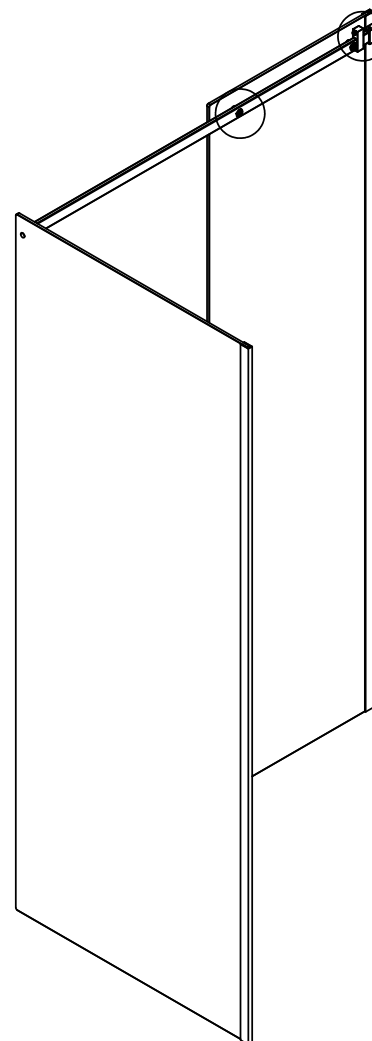
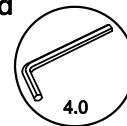
Parts list
(Include):Tools required
for product
installation:

25

Parts list
(Include):



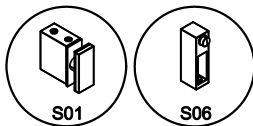


Tools required
for product
installation:

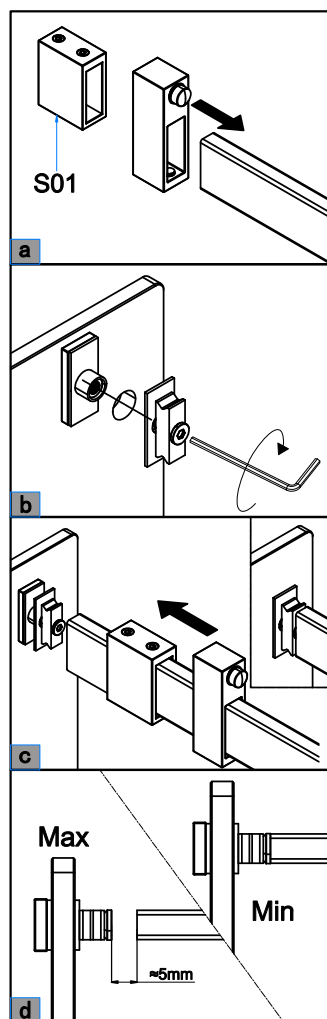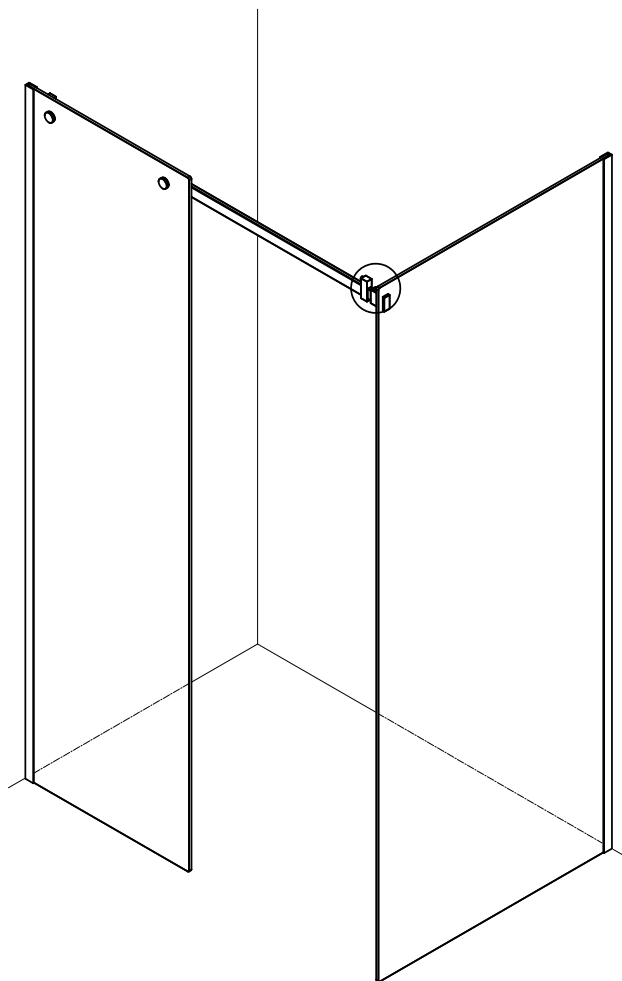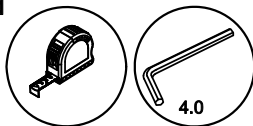


26

Tools required
for product
installation:

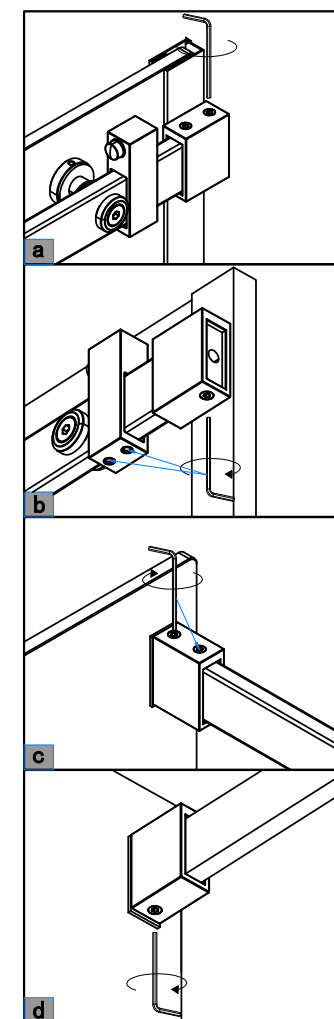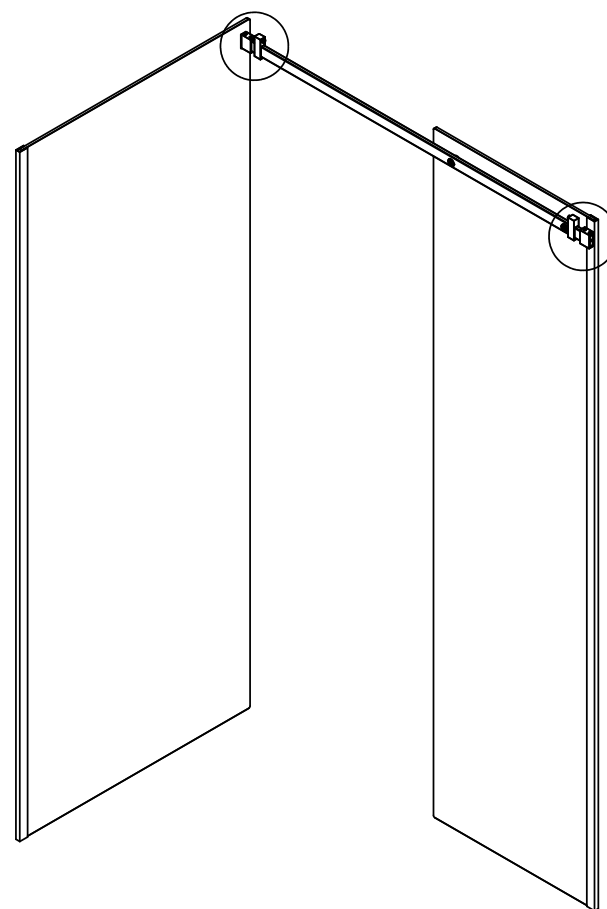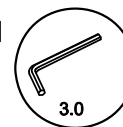


27

Parts list
(Include):

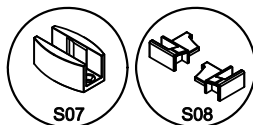


Tools required
for product
installation:

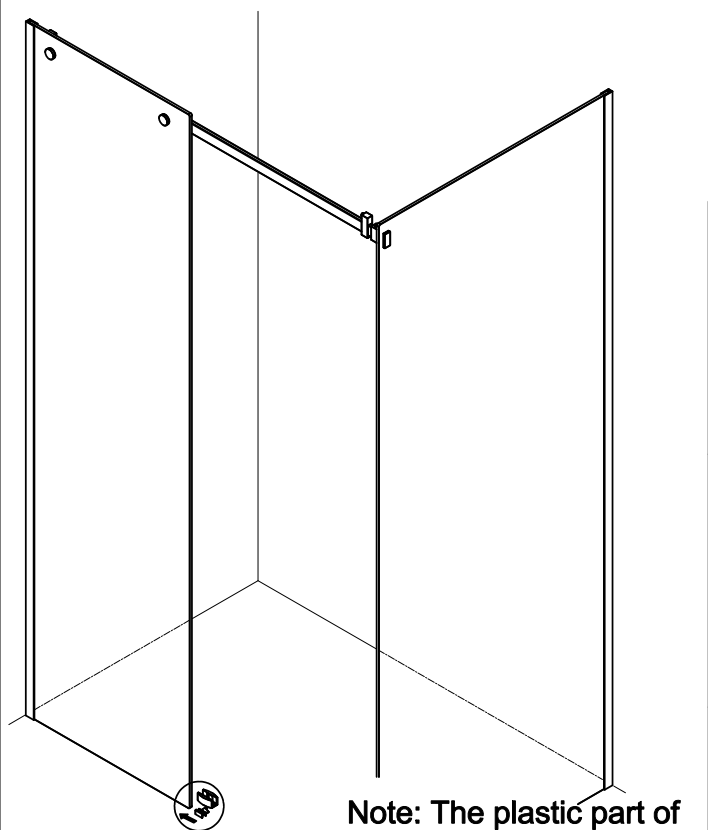


Note: The plastic part of the glass guide should be placed as shown in the diagram.

Note: The raised part of the bottom waterproof connector as indicated by the arrow can be snapped off.



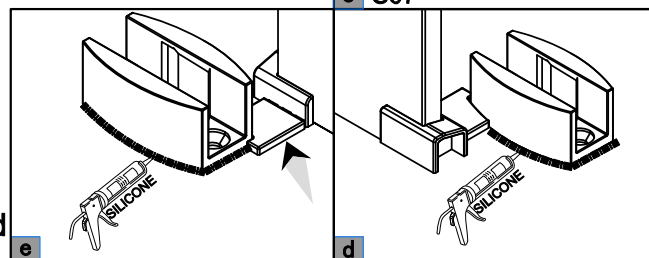


28

Parts list
(Include):

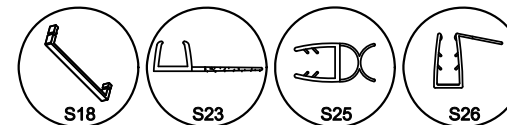


Tools required
for product
installation:

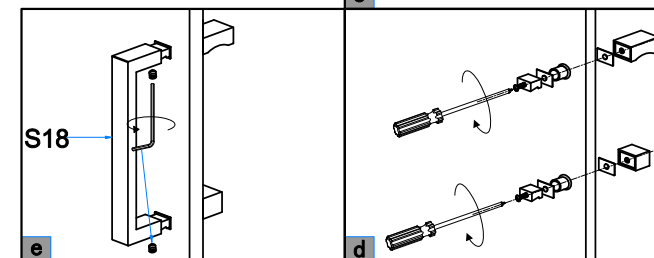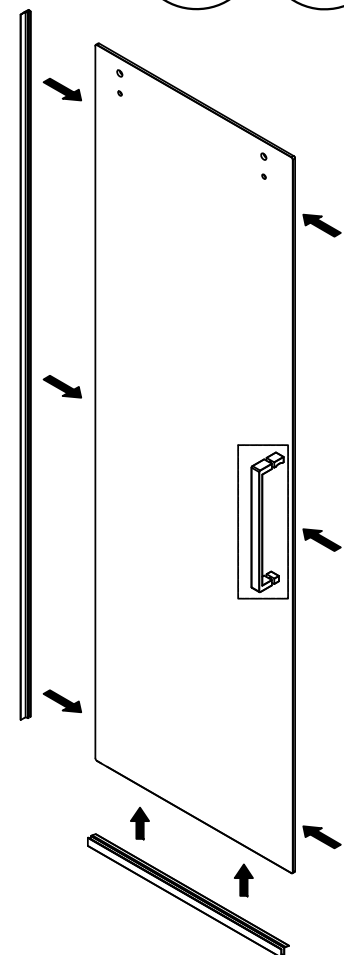
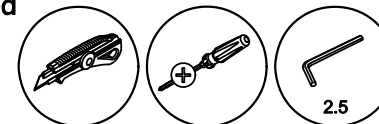


29


Parts list
(Include):

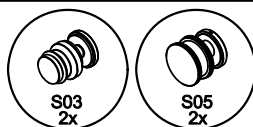

Tools required
for product
installation:

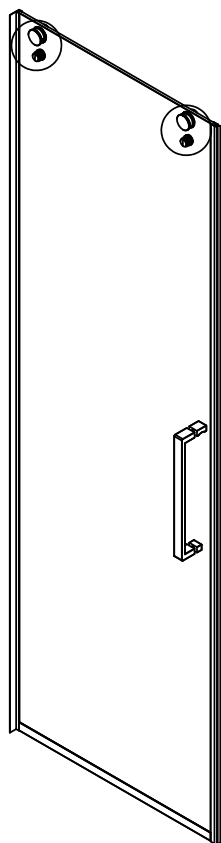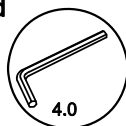




Note: in this step, pls
adjust the roller to
highest position.

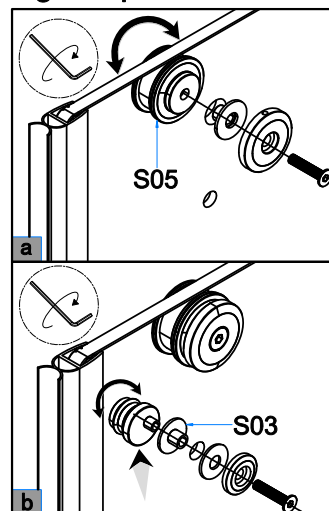

Note: in this step, pls
adjust the eccentric screw
to the lowest position.


30

Tools required
for product
installation:




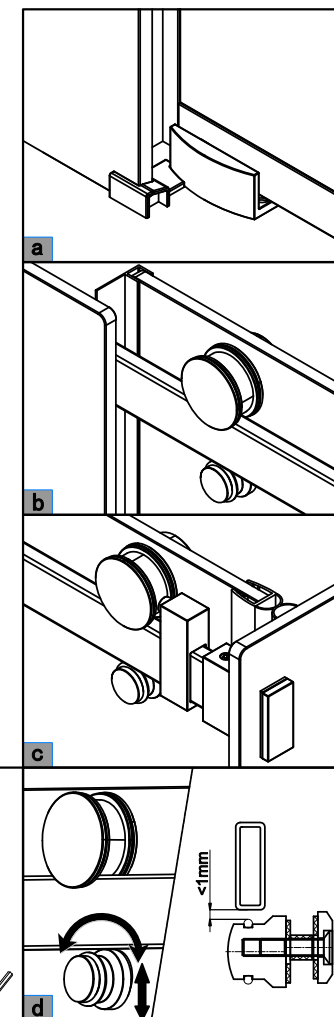
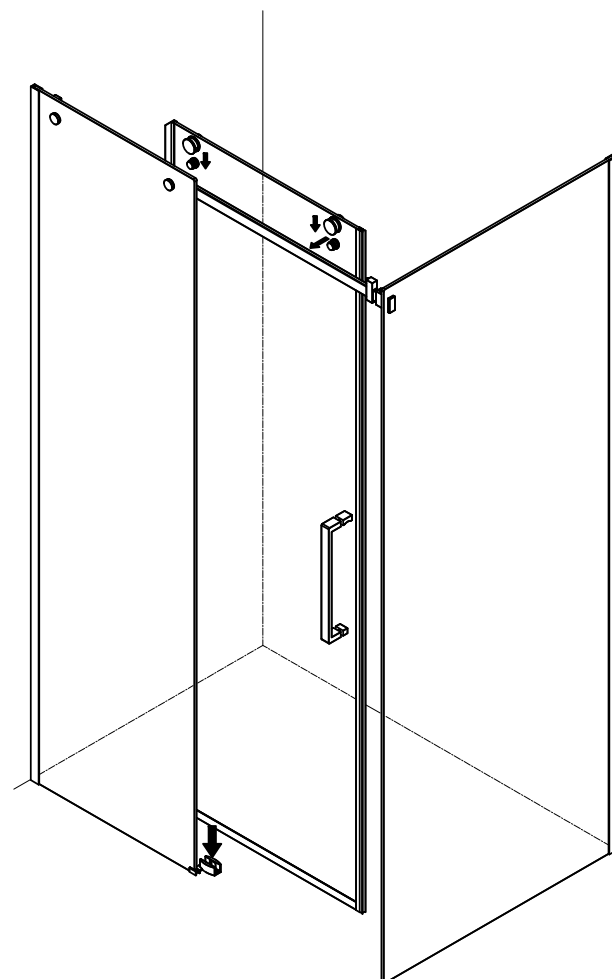
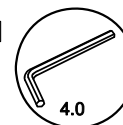


31

Parts list
(Include):

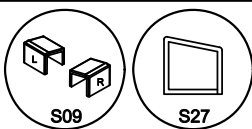

Tools required
for product
installation:


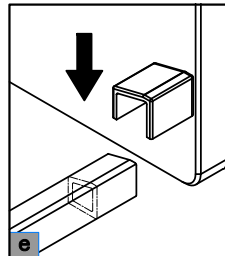
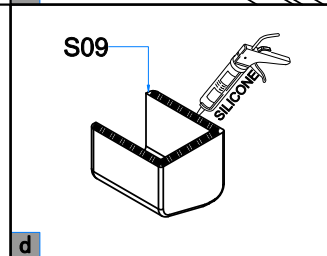
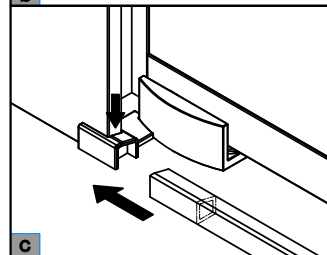
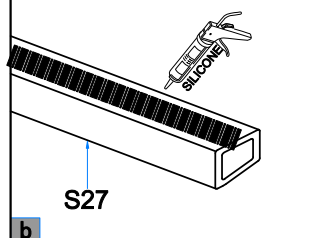
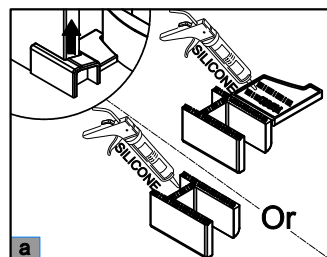
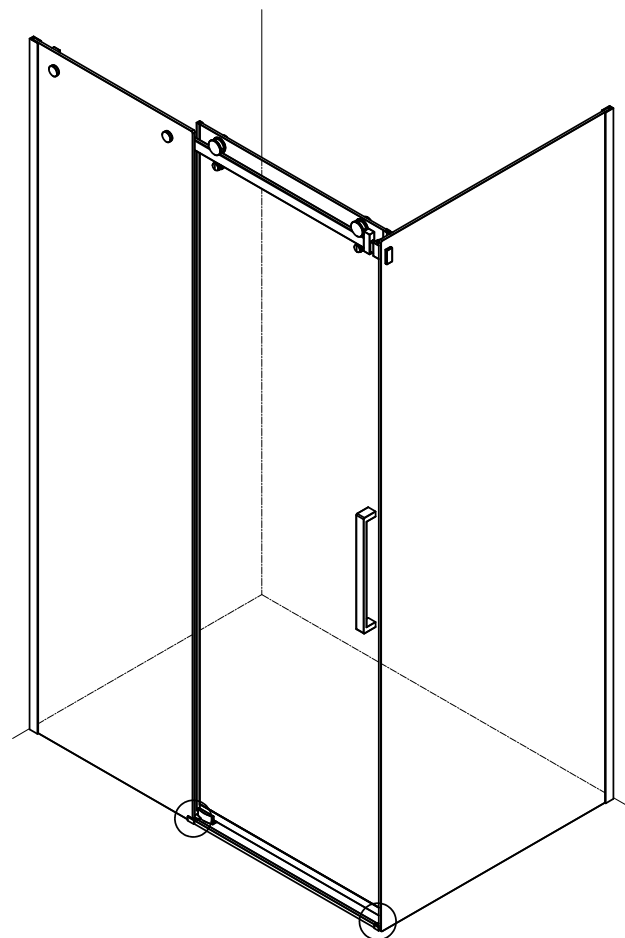


32

Parts list
(Include):






Tools required
for product
installation:

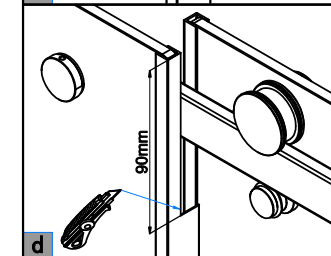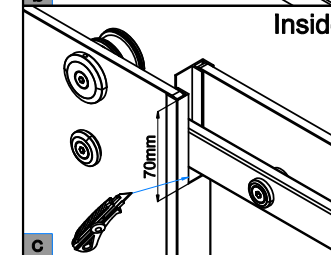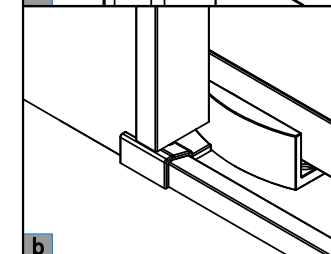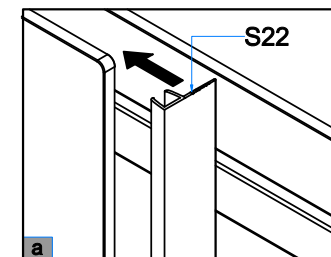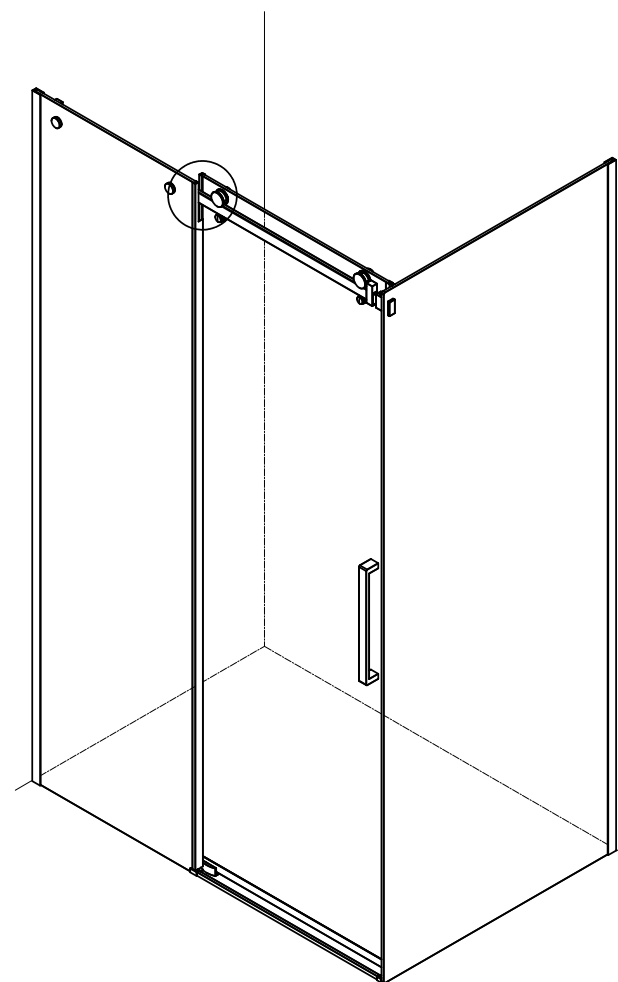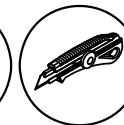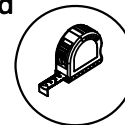

33

Tools required
for product
installation:

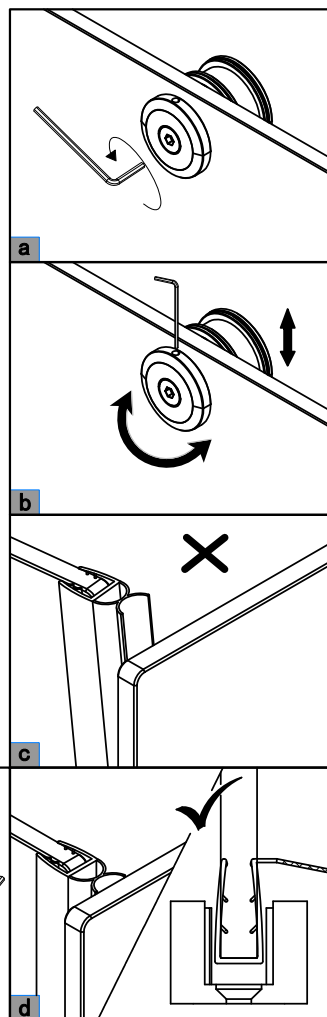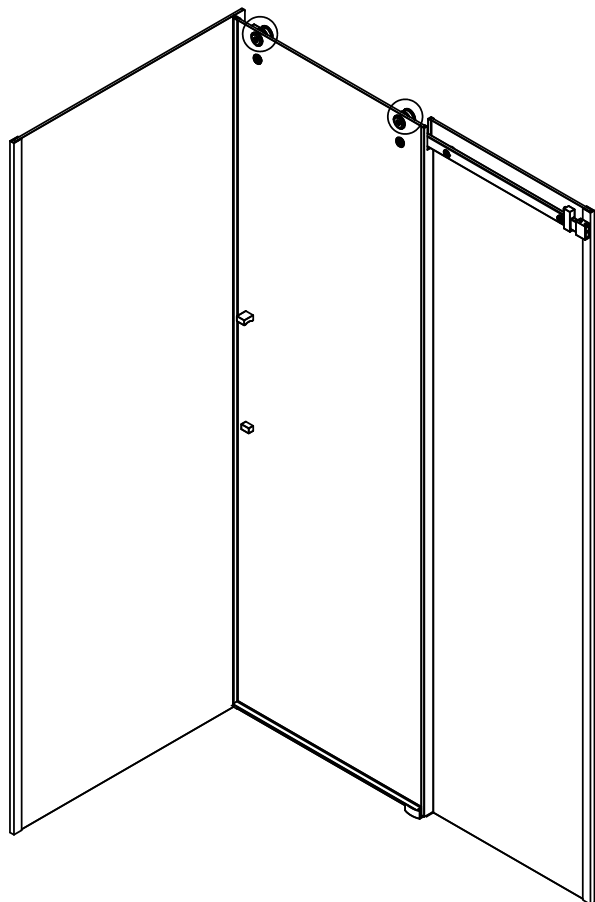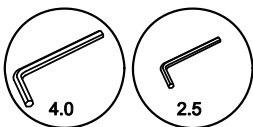

34

Tools required
for product
installation:

